


## Ehang Ghost GPS Quadcopter

HD Camera, 2D Gimbal (Supports Gopro Camera). Mobile Phone Control (App for Android or IOS Device).



Controlled by RC Transmitter or Mobile Devices.



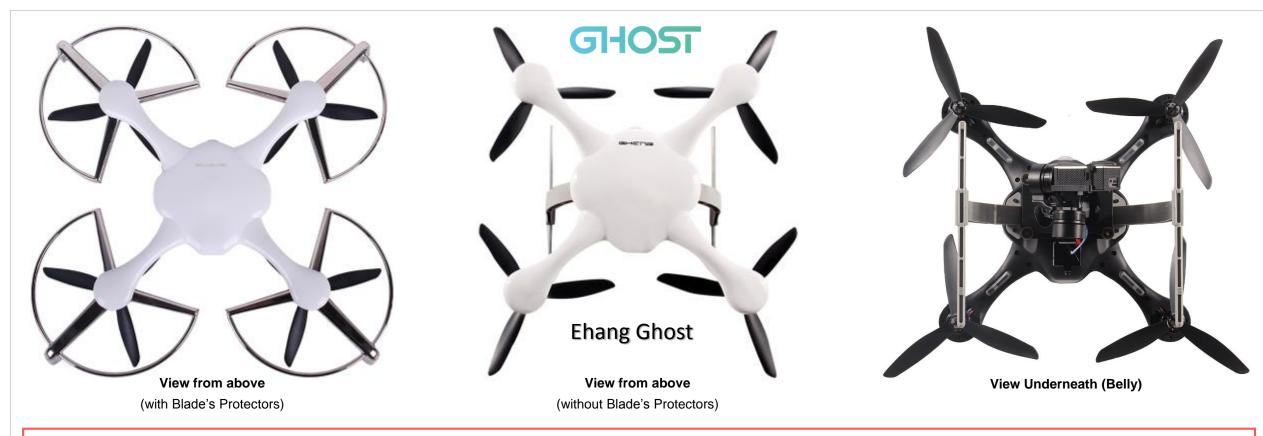

## SPECIFICATIONS (Ehang Ghost):


- Transmitter: PCM or 2.4GHz (at least Six Channels).
- Battery: 5400mah Li-po battery.
- Flight Precision: ± 0.5meters.
- Maximum angle of rotation: 360°.
- Drone Speed: 6 15meters/second
- Control distance: 1000 meters (With G-Box Bluetooth).
- G-Box: 433mHz, 80mw, standard Bluetooth communication device.
- Flight time:
- Without guard rings and camera: about 26 minutes.
- With guard rings and without camera: about 14 minutes.

- Without guard rings and with camera: about 20 minutes.
- Drone Weight: With guard rings 790 grams.
- 5400 mAh Battery: 320 grams.
- 2700mAh Battery: 180 grams.
- Gimbal: 225grams.
- 3-blade propeller: 10 grams per piece.
- Guard ring: 40 grams per piece.
- HD Camera: 60 grams.
- Landing gear: 31 grams per piece.
- Diagonal Distance: 36.0 cm.
- Motor: EHang EH9812 and EH9812R (reversible Motor).
- Drone Height: 10.0 cm.

- Height with Landing Gears: 19.0 cm.
- Battery: XT60 connector, 3-cells, 11.1 Volts, 5400 mAh, Li-po.
- GPS: UBlox 6M parallele compacted compass.
- Wind Resistance: < 10.7 meters /second.</li>
- Night mode has LED lights to track drone in the sky.
- The Pilot can integrate with a third-party recording monitor to preview the photos and videos as the drone is flying.
- The G-BOX is a wireless interface unit designed specifically for controlling and interfacing with the GHOST Drone. The GHOST App cannot operate the Ghost without a G-BOX.
- Independently Flight Control System with ultra-fast processing capacity enable quick response at millisecond level.





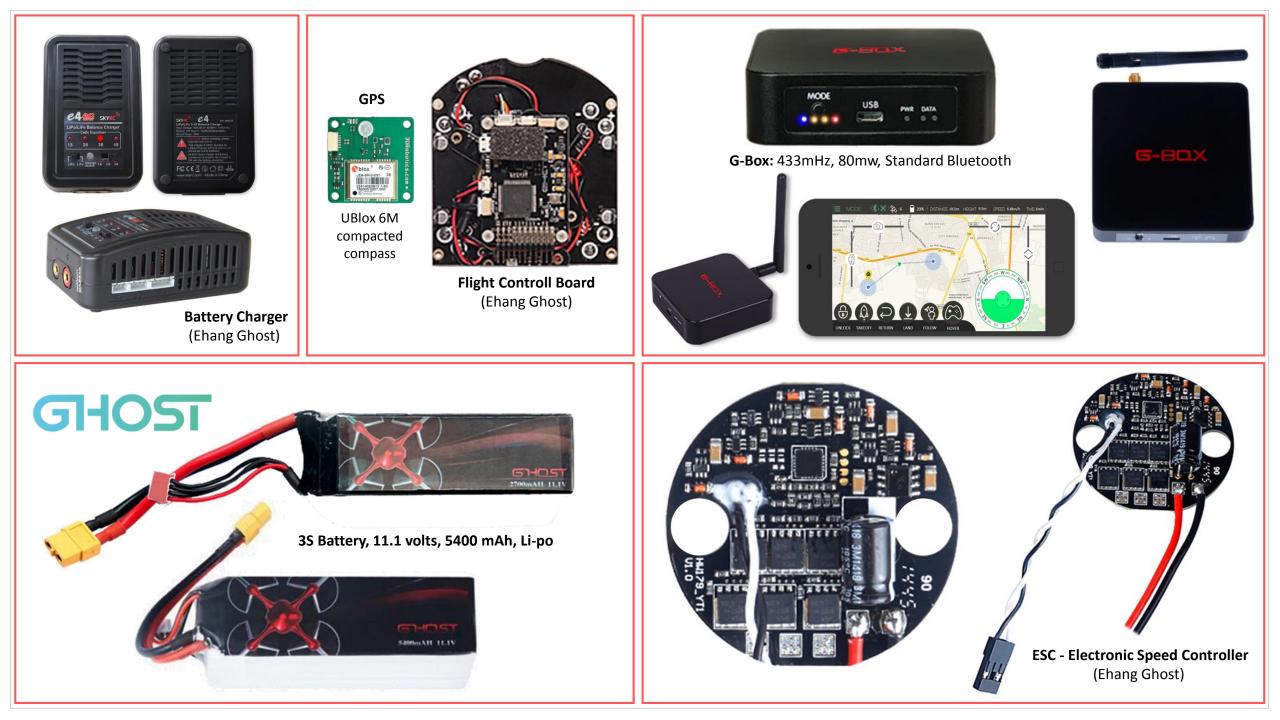



01 - STATUS BAR: Settings, Flight mode, Bluetooth, Heartbeat, Number of Satellites, Battery Level, Flight Distance, Altitude, Speed, Flight Time.

- 02 **ROTATE**: Yaw control.
- 03 ELEVATION: Adjust altitude.
- 04 MICRO-CONTROL: Functions similarly to a remote control joystick.
- 05 **HOVER**: Stay in the current position.
- 06 FOLOW: Auto-follow.

- 07 LAND: Descend and land.
- 08 **RETURN**: Returns and hovers at 10m (33 ft) above the takeoff point.
- 09 TAKEOFF: Take off and hover at 10m (33 ft).
- 10 LOCK: Stop propellers / UNLOCK: Start propellers.
- 11 GIMBAL: Control gimbal pitch.
- 12 GIMBAL: Control gimbal roll.

GHOST





## GHOST

- 1) ANTENNA
- 2) GIMBAL UP-DOWN (TILT)
- 3) ON / OFF
- 4) GPS: Hover, Sim-Hover, Return MANUAL: Float, Sim-Float, Land
- 5) THROTTLE / ELEVATOR TRIM
- 6) AILERON
- 7) ELEVATOR / THROTTLE
- 8) AILERON TRIM
- 9) POWER SWITCH
- 10) POWER SWITCH
- 11) BINDING KEY
- 12) RUDDER TRIM
- 13) THROTTLE / ELEVATOR
- 14) THROTTLE / ELEVATOR TRIM
- 15) GPS / MANUAL
- 16) LOCK / UNLOCK